

COMPANION

OWNERS MANUAL

HIGH OUTPUT 2 BURNER STOVE

Part No. PRI2223



IMPORTANT: Read these instructions for use carefully. Familiarise yourself with the appliance before connecting it to a gas container. Keep these instructions for future reference.

AUSTRALIA'S ORIGINAL OUTDOOR BRAND

GENERAL WARNINGS

- This appliance shall only be connected to a Propane cylinder with a 3/8" LH BSP cylinder valve certified to AS2469 Standards.
- This appliance shall only be used with the specific LP hose and regulator assembly supplied
- This appliance is designed for outdoor use only and must be operated away from any flammable material or surfaces and materials.
- This appliance is to be stored in a dry and well ventilated location free from direct sunlight.
- Do not store when valve is still connected to the cylinder.
- Make sure that the cylinder is disconnected and is stored in a well ventilated area, free from direct sunlight, heat and ignition sources.
- If being stored indoors, ensure that the location complies with the standard AS/NZS1596.
- This appliance must only be serviced by an authorised service agent, return to your place of purchase for service and repair.

DANGER!

- During operation all surfaces will be extremely hot and should not be touched or handled.
- Do not use the appliance if it is leaking, damaged or does not operate properly.
- Handle with care even after brief use, always pick up using the legs not the cylinder.
- It may be hazardous to attempt to fit other types of gas containers or cartridges.
- Use only in well ventilated areas.
- Always operate appliance a minimum of 900mm from flammable materials, walls and 1200mm from the ceiling.
- Do not use adaptors. Do not modify appliance to fit other connectors or cylinders.
- Do not use multiple appliances to heat a single utensil.
- Children must be supervised by an adult at all times.
- Never leave appliance unattended when operating.
- Use as a cooking appliance only, not to be used as heater or modified for any other reason.
- Avoid boil over and spills on to burners.



CARBON MONOXIDE HAZARD

**Using this appliance in an enclosed space may cause DEATH.
Do not use in caravans, tents, marine craft, cars, mobile homes or similar locations.**

IMPORTANT

- Use outdoors only.
- Keep children away at all times.
- CAUTION: Accessible parts may be very hot. Please take care when handling or moving the appliance.
- Appliance is to be used on a stable, level, flat, non-flammable surface. The appliance should be protected from direct drafts and in a well ventilated place.
- Only cooking vessels with a minimum diameter of 180mm and a maximum of 200mm are to be used with this appliance.
- Take care that the primary air intakes, located on the burner tube of this appliance are not obstructed, or that air flow is restricted by placing items or other appliances close to or adjacent to the inlets.
- If you smell gas, immediately turn the gas off at the cylinder and move the appliance and cylinder to a well ventilated area outside, keeping well away from sources of heat such as naked flames and pilot lights.
- Do not attempt to move or relocate the appliance when it is operating, extinguish the burner and allow to cool, disengage the gas cylinder then move the appliance.

CHECKING FOR GAS LEAKS

- Check that all connections are tight and that the gas cylinder connection has been tightened before you turn the cylinder gas valve on.
- **NEVER** check for leaks with a flame or pilot light.
- Using Companion Gas Leak Detection Spray or soapy water, coat all connections, if bubbles appear turn the cylinder gas control off and retighten the connection before re-testing.
- Inspect the appliance regularly for signs of wear, leaks or incorrect operation. If symptoms such as flaring of the burner, issues with lighting, damages to hoses or connections or leaks from seals or gas controls are identified do not attempt to repair, return to your authorised stockist for service and maintenance.

 
 


CHANGING GAS CYLINDER

- To check if gas remains in the cylinder, disconnect from the appliance and hold the cylinder in a vertical position then shake from side to side, if there is a sound or feel of liquid movement inside, the cylinder contains gas.
- When changing gas cylinders ensure this is conducted outside in a well ventilated location free from people, animals and ignition sources such as naked flames, pilot lights and electrical equipment with heaters or elements.



SAFETY INSTRUCTIONS

This appliance shall only be used in an above ground open air situation with natural ventilation without stagnant areas, where gas leakage is rapidly dispersed by wind and natural convection.

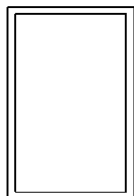
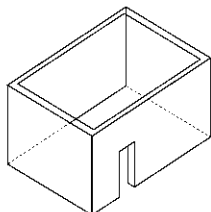


Any enclosure in which the appliance is used should comply with one of the following:

  - A.** An enclosure with walls on all sides, but with no overhead cover.



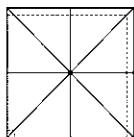
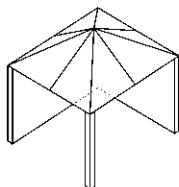


  - B.** Within a partial enclosure that includes an overhead cover and no more than two walls.

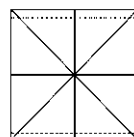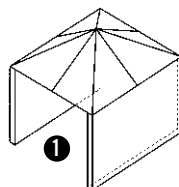

- C.** Within a partial enclosure that includes an overhead cover and more than two walls, the following must apply:

    1. At least 25% of the total wall area is completely open.
2. 30% or more in total of the remaining wall side, back and front wall areas is open and unrestricted.
3. In the case of balconies, 20% or more of the total wall area must remain open and unrestricted.

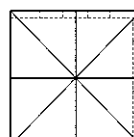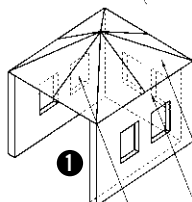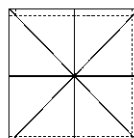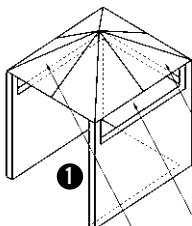

The figures shown are diagrammatic representations of outdoor areas. Rectangular areas have been used in these figures - the same principles apply to any other shaped areas.

OWNERS MANUAL

UNDERSTANDING YOUR APPLIANCE



HOSE AND REGULATOR



CYLINDER CONNECTION



GAS INLET

1. CONNECTION

Your stove is designed to connect directly on to a 3/8" LH BSP camping gas cylinder using the specially designed LP Gas hose supplied with the appliance.



Step 1. Check that the gas controls are in the "Off" position (turned fully clockwise).



Step 2. Take the stove connector head of the hose and attach to the gas inlet on the appliance, tighten up using fingers.



Step 3. Attach the other end of the hose to the gas cylinder, and tighten.



Step 4. Turn the cylinder gas valve on in an anti-clockwise direction for one full turn and then check the connections for leaks using Companion Leak Detector Spray or Soapy Water, if a leak is detected turn the cylinder gas valve "Off" and retighten all connections then retest.

2. LIGHTING BURNER



Step 1. Select the burner to be ignited and slowly turn the gas control in an anti-clockwise direction approximately $\frac{1}{4}$ of a turn.



Step 2. Depress the Piezo button firmly and look for a spark from the electrode positioned above the burner.



Step 3. If the burner does not ignite, turn the gas control in the clockwise direction to the "Off" position and allow the residual gas to disperse before attempting to reignite the burner.

3. ADJUSTING FLAME



Step 1. Turn the gas control in an anti-clockwise direction to achieve a higher flame and in the clockwise direction for a lower flame.

CARE INSTRUCTIONS

Using warm soapy water with a mild detergent wipe down all surfaces and areas of the appliance, taking care not to allow water to enter the burner outlets or aeration holes located in the burner tube.

DO NOT submerge the appliance in a sink or bowl.

DO NOT use abrasive cleaners or bleach.

MAINTENANCE AND SERVICE

During operation if it is noted that the burner flame is unstable, is changing colour from blue to yellow or has a distinct smell it is important that you take the appliance to your local authorised gas appliance repairer for inspection.

Periodically check the gas control is tight and has no leaks, follow the testing for leaks procedure. Check the gas connection and regulator for any signs of wear or damage, if identified contact customer service for a replacement assembly immediately.

For further information or assistance please contact customer service on 1300 555 197 or email service@companionbrands.com.au

TECHNICAL DETAILS

SPECIFICATIONS	
Part No.	PRI2223
Gas jet size	0.58mm +/- 0.01
Gas consumption	524g/hr - 26.4Mj/hr Per Burner
BTU output	25,000 BTU - Per Burner
Dimensions	590L x 280W x 110Hmm
Weight	5.4kg
Certificate number	GSCS20148