



# Tentworld Chief with Deputies Owners Manual.

Congratulations on the purchase of your Tentworld Chief Lantern with Deputies! At Tentworld we take great pride in developing products that will serve you well on your next camping holiday. We ask that you take a quick moment to familiarise yourself with your lantern to ensure you get maximum value from it!

## Charging your Lantern.

Before using your lantern, place it on charge for at least 24 hours. To charge the lantern use the Micro USB socket found under the rubber cover. When charging is complete your lanterns green charging indicator will stop flashing and glow solid. If you're also charging Deputies using the Chief Docking System the Deputies will stop glowing Red when they're fully charged.

## Looking after the battery

To ensure longevity of your battery system - avoid storing your lanterns battery flat. Always urgently charge your lantern if you ever fully discharge it. It's recommended that you store your lantern 80%-100% charged.

Avoid fully discharging your lantern to ensure the longest life.

NOTE: Your lantern contains lithium batteries. Keep out of direct sun.

## Operating your Chief & Deputy Lantern

To turn your Chief lantern on, press and hold down the control knob until the lantern turns on. To adjust brightness, turn the knob clockwise & anticlockwise as required.

To turn on your Deputy detachable lanterns hold down the rubber button until the lantern turns on. To cycle through modes quickly press the rubber button.

## IP Rating

The Chief lantern has IP44 rating, meaning it is splash proof only. DO NOT leave in the rain.

The Deputy Side Lanterns have IP43 rating meaning it has limited splash resistance. Avoid taking into the rain or getting wet.

## Warranty

Tentworld Pty Ltd warrants this product against defects for a period of **ONE YEAR** from the date of purchase. Tentworld Pty Ltd will repair or replace the product, at its discretion, should a warrantable defect arise within the warranty period. If the exact model is unavailable a model of equivalent nature will be substituted at our discretion. This warranty excludes faults and failures caused by improper use and abuse; fair wear and tear; incidental loss or damage; or failure to follow instructions regarding care and maintenance. Products used for a commercial nature are not covered by this warranty against defects.

A warranty may be claimed by returning the product to its place of purchase, with a detailed proof-of-purchase clearly showing the date and detail of the purchase.

You can contact Tentworld Customer Service by phone on 1300 836 896, in writing: PO BOX 6632, Clifford Gardens QLD 4350. The benefits under Tentworld Pty Ltd warranty against defects are in addition to other rights and remedies under law in relation to goods.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.