

 
COMPANION

RECHARGEABLE FAN WITH RADIO

Instruction Manual




Part No. COMP345



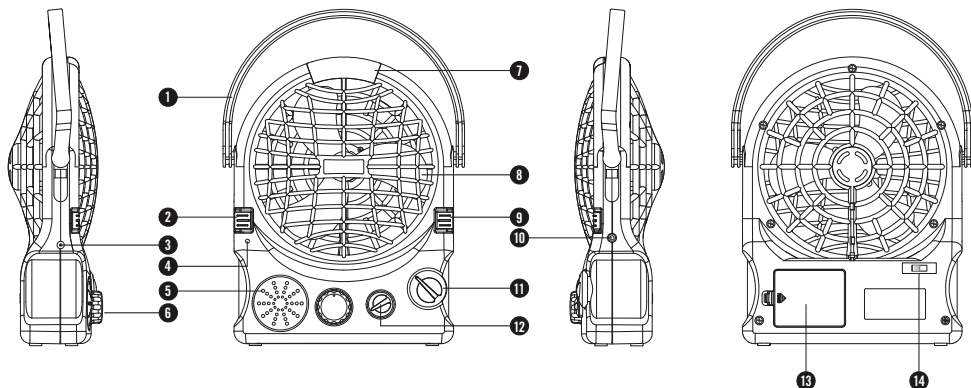

PARTS LIST

1. Handle and stand
2. LED light switch
3. DC jack
4. Charging indicator
5. Speaker
6. Fan switch
7. LED light
8. Fan blade
9. AM/FM radio switch
10. Audio jack
11. Radio tuning knob
12. Volume knob
13. Battery door
14. Battery selector switch
15. USB cable
16. Audio cable
17. External adaptor

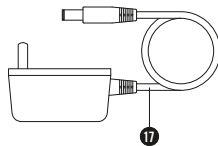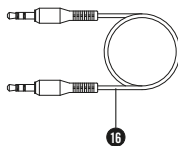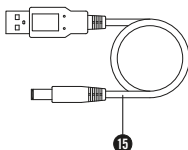

IMPORTANT

Please read this instruction manual carefully before operating the unit

- Charge battery for minimum of 10 hours before first use or if unit has not been used for a long period of time
- If unit is being stored away for a long period of time without use, remove battery from unit
- Battery should be charged every 3 months

WARNING

- Place unit in well ventilated area when in use or recharging battery
- When placing battery in unit, ensure it is installed as indicated inside battery compartment
- Do not dispose of battery in fire
- To be repaired by qualified persons only
- DO NOT expose to rain
- If adaptor cord becomes damaged, it must be replaced by a qualified person
- This unit is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge
- Children must be supervised at all times when around this unit


FAN OPERATION

- Turn the fan switch to required fan speed (high or low) to switch fan on
- To switch fan off, turn fan switch to “off” position





LED LIGHT OPERATION

- Turn LED light on or off by sliding the light switch

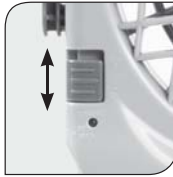


RADIO OPERATION

- Select required radio band (AM or FM) (9)
- Adjust volume control button in clockwise direction to turn radio on and to select required volume
- Tune radio to required radio station using the tuning knob

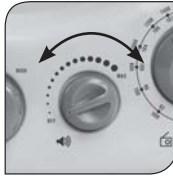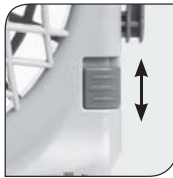

AUDIO OUTPUT OPERATION

- Connect audio output plug (included) to the appliance and to your audio device (eg MP3 player)
- Hit play on your audio device and adjust device volume to about 80%
- Adjust output volume control as necessary using volume knob on the appliance
- To switch off, turn volume knob to “off” position and turn off audio device

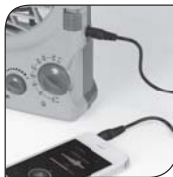

ABOUT THE IN BUILT RECHARGEABLE BATTERY

The rechargeable battery supplied with the appliance is a non-replaceable, non-serviceable item.

- When recharging the battery, ensure the appliance is in a well-ventilated area and switched off
- Do not put battery into fire and avoid reverse charging
- Battery must be charged for approximately 10 hours in order to be fully charged
- Ensure the appliance is disconnected from power supply before removing the battery
- A leaking battery must be carefully removed from the appliance and disposed of properly

TO RECHARGE IN BUILT BATTERY

- Ensure unit is switched off prior to charging, installing or replacing batteries
- Connect AC adaptor or USB adaptor (included) to unit
- Red light will be illuminated on unit to indicate battery is charging and remains on until charger is disconnected
- Unit can run from AC adaptor or USB input if the battery is flat, however battery will not recharge

OPERATING THE APPLIANCE USING DRY BATTERIES

- Dry batteries required: 3 x AA batteries (not included)
- Open battery door and insert dry batteries according to directions inside compartment
- Close battery door
- Slide battery selector switch (14) to “DRY BATTERY”

USING THE CARRY HANDLE AS A STAND

- Slide handle pivots to lower position, and push handle back to rearmost position. Lean unit back on handle for angled airflow.



CLEANING AND MAINTENANCE

- Ensure appliance is switched off and disconnected from a power source before cleaning
- Clean with a damp cloth only – do not use any abrasive cleaners or harsh chemicals
- Ensure all components are completely dry before storing the appliance

TECHNICAL SPECIFICATIONS

Input voltage:	6V DC
Input power:	5W
In-built battery charging time (AC):	Minimum 10 hours
In-built battery charging time (USB):	Minimum 22 hours
In-built battery type:	Rechargeable lead acid battery 4V
Maximum fan air volume:	>60m ³ per hour
Maximum fan speed:	3.5m/s (approx)
Radio Frequency:	AM - 540KHz - 1600KHz FM - 88MHz - 108MHz

APPROXIMATE IN-BUILT BATTERY RUN TIME (FAN ONLY)

Fan on high speed:	4.5 hours
Fan on low speed:	8 hours

ACCESSORIES PROVIDED: AC ADAPTOR

Input voltage:	100-240V AC 50/60Hz
Output voltage & current:	6V DC / 800mA

WARRANTY STATEMENT

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if goods fail to be of acceptable quality and the failure does not amount to a major failure.

Primus Australia Pty Ltd
PO Box 385
Bundoora Victoria
3083 Australia

**For more information contact
Customer Service on 1300 555 197**

Distributed by
Companion Brands
Bundoora VIC 3083
www.companionbrands.com.au